




975 Controls and Indicators

FRONT PANEL

1. **POWER LIGHT**
White light: Power on
2. **POWER BUTTON / VOLUME ADJUSTMENT:** Press this button to turn the system power on or off. This also functions as an adjustment knob for the volume and tone depending on the mode selected (see 5,6,7 below).
3. **STATUS LIGHT:** Microphone link and pair indicators.
Blue light: Microphone(s) is paired to the system
Off: Microphones are not paired to the system
4. **IR RECEIVER:** For pairing to microphone.
5. **AUDIO INPUT VOLUME SELECTOR:** Selects Volume as the mode for the adjustment knob (2) for the audio sources connected to the audio inputs on the back of the 975.
6. **AUDIO OUTPUT VOLUME SELECTOR:** Selects Volume as the mode for the adjustment knob (2) for the audio device connected to the audio output jack on the front of the 975.
7. **STONE SELECTOR:** Selects Tone as the mode for the adjustment knob (2) for the microphone. This adjusts the bass or treble that is heard through the classroom speaker.
8. **AUDIO OUTPUT JACK:** 3.5mm stereo connector for connecting to an assisted listening device (ALD) or to a computer for recording.

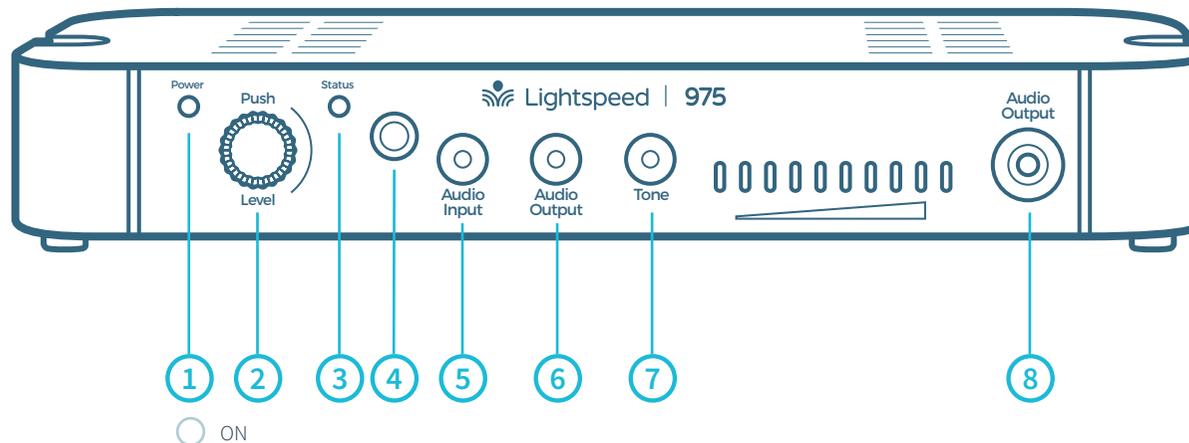



Flexmike Controls and Connections

- POWER/MUTE SWITCH:** Press and hold to power on, press to mute or talk, press and hold to power off.
Blue light: Talk
White light: Mute
- IR TRANSMITTER:** For pairing to base unit.
- MIC 1 STATUS:** lighted to indicate microphone is registered as Mic 1
White: solid = Normal operation
White: flashing = Linking in progress
- MIC 2 STATUS:** When using a second microphone, this LED is lighted to indicate microphone is registered as Mic 2
White: solid = Normal operation
White: flashing = Linking in progress
- MICROPHONE VOLUME UP/DOWN**
- POWER STATUS LIGHT**
Red light: In operation, turns red to indicate low battery.
White light: Normal operation

When charging in Cradle Charger:
Red light: Charging
Green light: Charging complete
- EARBUD/MIC CONNECTION:** Connect the earbud for monitoring for use with Pods only, also for use with optional EMA (earset) and LMA (lapel) microphones.
- LANYARD INTERFACE:** Insert the lanyard into this hook to wear the Flexmike.
- BATTERY:** Remove the battery to replace the rechargeable battery pack.
- USB INPUT:** Connect audio source to send to 975. USB input can also be used for charging.

